

Locating the MAC addresses for On-Campus Student Devices

GAMING CONSOLES

PlayStation 3

1. In the XMB home menu, go to **Settings** and select **System Settings**.
2. Select **System Information**.
3. The MAC Address will be listed.

PlayStation 4

1. Select the **Settings** icon from the main menu.
2. Select **System**.
3. Click **System Information**.
4. The Mac Address will be displayed.

XBOX 360

1. Go to **My Xbox** in the Xbox Dashboard and select **System Settings**.
2. Click **Network Settings**,
3. **Configure Network**.
4. Select **Advanced Settings** from the Additional Settings tab,
5. For the Wired MAC Address, select **Alternate Mac Address**.
 - I. At the bottom of this screen you'll see a heading called Wired MAC Address.
6. For the Wireless MAC Address, select **Wireless Information**.
 - I. The Wireless MAC address will be displayed.

XBOX One

1. Navigate to **My Games & Apps**.
 - I. Alternatively, press the **Menu** button on your controller.
2. Select **Settings** and then **Network**.
3. Select **Advanced Settings**.
4. Record the Wired and Wireless MAC addresses on this screen.

Wii (Note: Original Wii consoles will only work on wired connections)

1. Select **Wii Settings**.
2. Select **Internet** and then **Console information**.
3. The MAC address will be displayed.

Wii U

1. Select **System Settings** and go to **Internet**.
2. Select **View MAC Address**.
3. The MAC address for the unit will be displayed on this screen.

Nintendo 3DS

1. From the **Home** menu, select the **System Settings** Icon.
2. Select **Internet Settings**.
3. Tap **Other Information**.
4. Tap **Confirm MAC Address** to view the systems MAC address.

Locating the MAC addresses for On-Campus Student Devices

STREAMING DEVICES

Chromecast

1. Chromecasts do not work in an enterprise environment.

Apple TV

1. Go to the main menu on your Apple TV, and select **Settings**.
2. Select **About** from the menu for the network information.
3. Here you can find your **MAC Address**, listed as either the **Wireless** or **Ethernet**

Roku

1. Select **Settings** from the Home screen.
2. Go to **Network**.
3. The Wired and Wireless MAC addresses will both be displayed on this screen.
 - I. Alternately, the MAC addresses can both be found on either the side or the bottom of the Roku.

SMART TELEVISIONS

INSIGNIA Smart TV

1. Select the **Settings Menu** or press **Menu**
2. Go to **Network**.
3. Select **Wired**.
4. The Wired and Wireless MAC addresses will be displayed.

Vizio Smart TV

1. Go to the Main Menu and select **Network**.
2. Select **Manual Setup**.
3. The Wired and/or Wireless MAC address will appear on the screen.

AMAZON FIRE TV

1. From the Home screen, press **Menu**.
2. Select **Settings**.
3. The Wireless MAC Address will be listed under Device Info.

Samsung Smart TV

1. Select **Network Settings**.
2. Choose **Network Status**.
3. The MAC addresses for the unit will be listed.

Sharp Smart TV

1. From the Home menu screen select **Network**.
2. Choose **Wired**.
3. The Wired and Wireless MAC addresses will display on this screen.