

## ***Ring Type***

### **To Set Ring Type for Models 794X, 796X and 797X**

- Press the ***settings*** key
- Select ***User Preferences***
- Select ***Rings***
- Use the arrow keys to select the line that you wish to modify the Ring Type for

(NOTE: You only have the extended selections on the DEFAULT ring)

- Use the arrow keys to scroll through your Ring Options
- Use the soft keys to ***Select***, ***Play*** (preview) or ***Exit*** back one menu
- ***Select*** the ring option you want to assign to the line that you chose
- Press the ***Save*** softkey
- ***Exit*** back to standard screen